Mode selection for "normally open" or "normally closed":

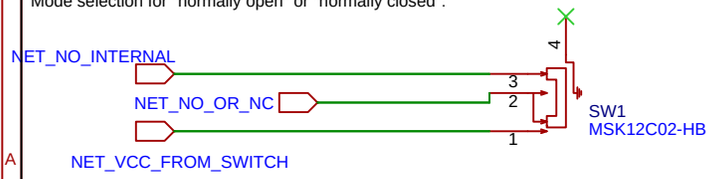

Cut wire to turn Device completly Off (no internal DeepSleep):

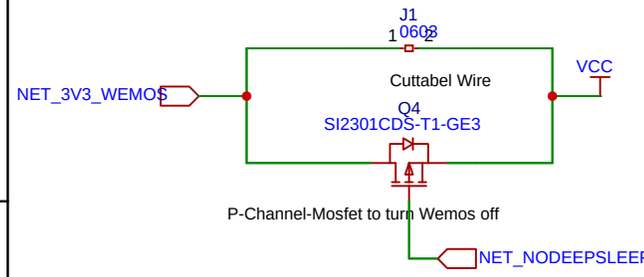

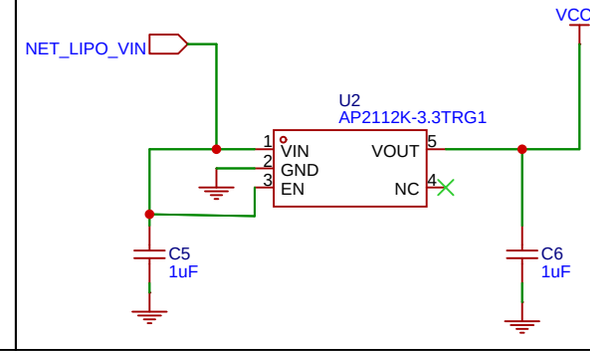

VCC to external NO _or_ NC switch:

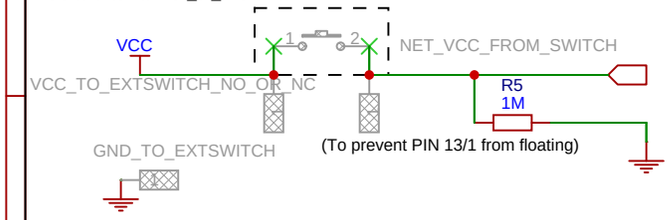

Wemos D1 mini PINs:

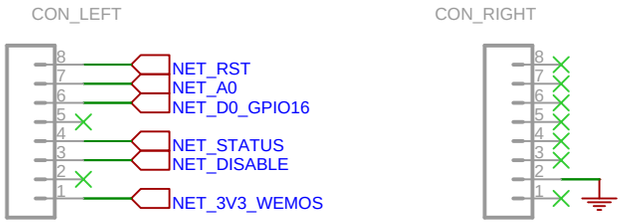

DeepSleep on/off:



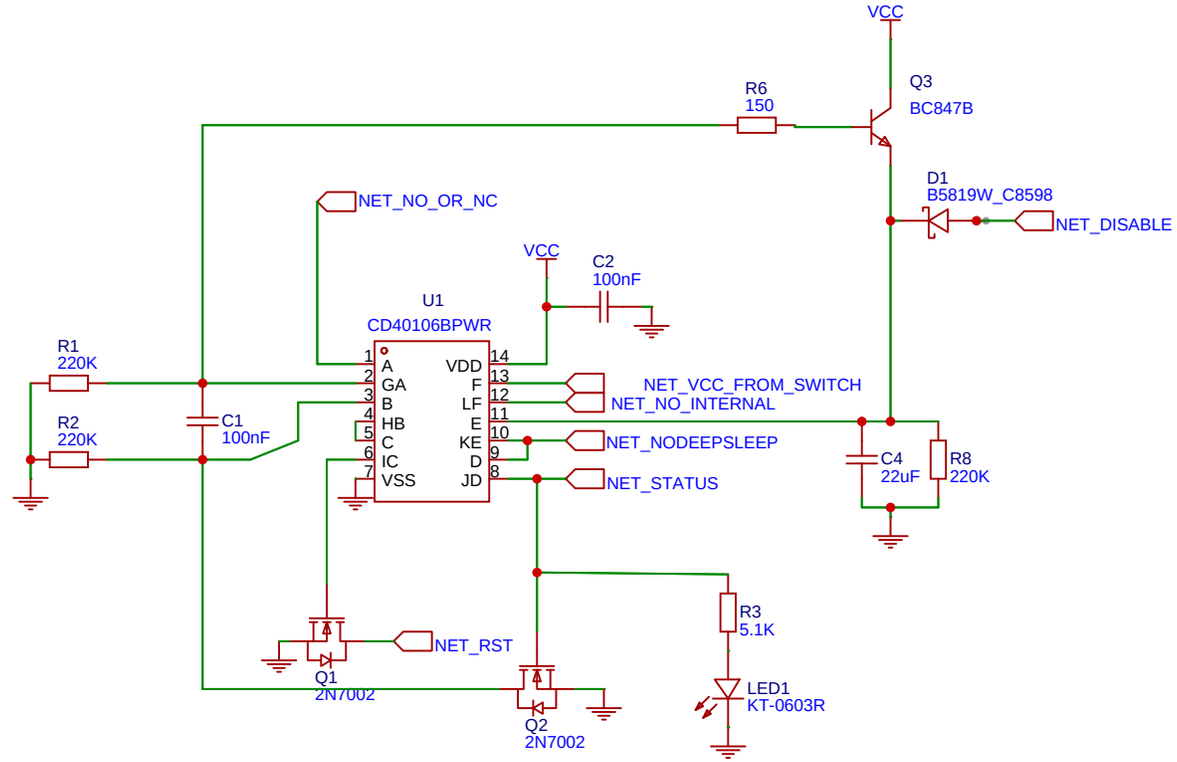

LiPo Connector (XH-Header-Male):

VBatt measurement (with extra resistor for proper voltage divider):



TITLE: MicroWakeupper_R7_1_2025-06-23_16-16-57	REV: 7.1
Date: 2025-06-23	Sheet: 1/1
EasyEDA V4.11.9	Drawn By: @tstoegi